

INFI

# K5

## Floor-Standing Installation Guide

### Installation Instructions

Base · Host Mounting · Cable Setup



# Contents

02

## Package Contents

What is in each box

03

## Detach the Host

Separate the head unit from the column

04

## Prepare the Stand & Base Feet

Position the column, fit the foot pads

05

## Attach the Base

Secure the base plate to the column

06

## Mount the Host

Reattach the head unit to the stand

07

## Connect Cables

Power and Ethernet pass-through

08

## Final Check & Power On

Stability check and power-on test

### Before you start

Have the included Phillips screwdriver ready and clear a flat, stable work surface. A table is ideal: several steps are easier with the stand laid flat.

# Package Contents

Confirm all components are included before you begin. If anything is missing, call **888-857-9831**.

Main Unit (Host)

Printer

Floor-standing Column

Floor-standing Base



Accessory Box

- POS Main Bracket
- POS Bracket Components A / B / C (depends on POS)
- Phillips screwdriver
- Power cable
- Printer roll & sample receipt paper
- POS terminal screws x3
- POS bracket mounting screws x3
- Signboard screws x3

## Box 1

### K5 Main Unit (Host) with Floor-Standing Column

- Host pre-attached to column
- Accessory box (see above)

## Box 2

### Floor-Standing Base

- Base plate
- Column screws x4
- Foot pad screws x4

## Screws & Fasteners

### Foot pad screws

**M6 x 11mm x4**

Base feet

### Column screws

**M6 x 30mm x4**

Base plate to column

### Silver cross-head screws

**Reused x4**

Host to stand (removed in Step 1)

## Step 1 Detach the Host


The host ships attached to the column. Separate them first so the base can be installed.



1 Locate the two covers, one on each side (circled).

2 Remove the cover on each side of the column.

3 Behind each cover are two cross-head screws.

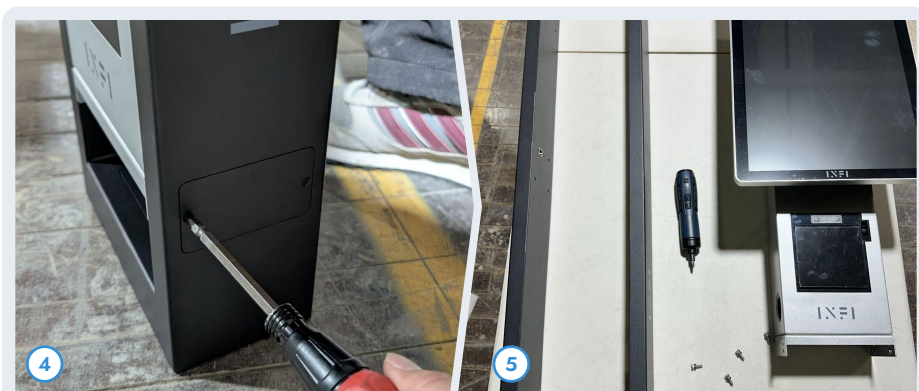

4 Unscrew the 2 cross-head screws on both sides (4 total).

5 Lift the host away from the column and set it on a padded surface.



**IMPORTANT** Keep the 4 silver cross-head screws. You will use them to mount the host back onto the stand in Step 5.

## Step 2 Prepare the Stand




### Turn the column upside down

Place the column upside down on a flat, stable surface, or lay it flat on a table, so the bottom end is accessible for the base.



**Tip** The side of the column with the ports is the rear of the kiosk.

## Step 3 Install the Base Feet

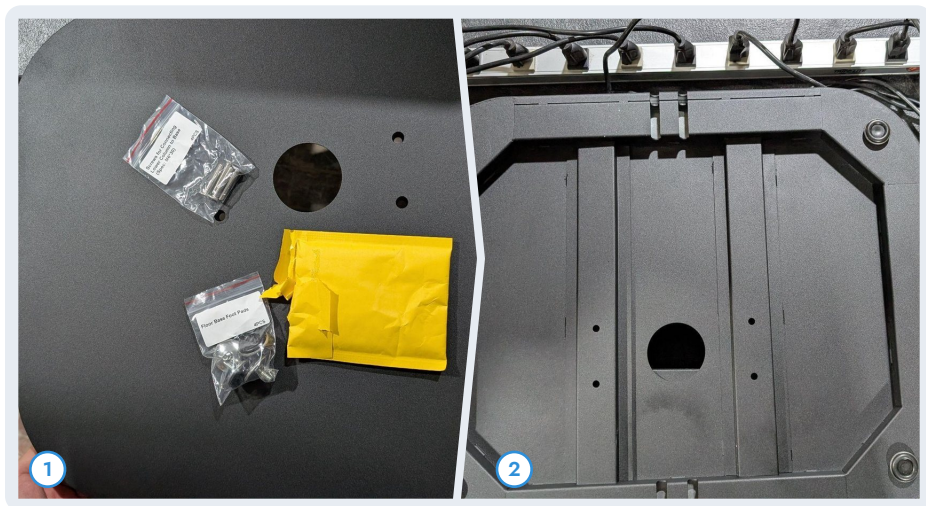

Take the base plate and the bag of foot pad screws.



Screw the 4 foot pads into the four corners on the underside of the base.

Foot pad screws M6 x 11mm x4

## Step 4

## Attach the Base

Secure the base plate to the bottom of the floor-standing column.

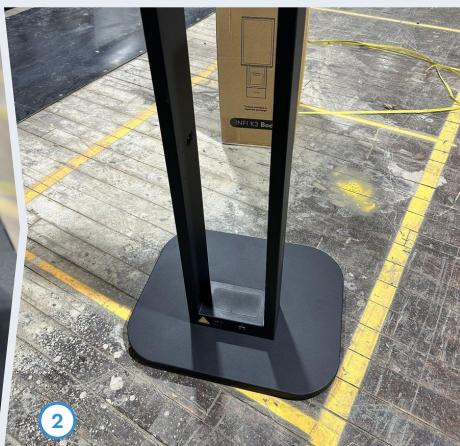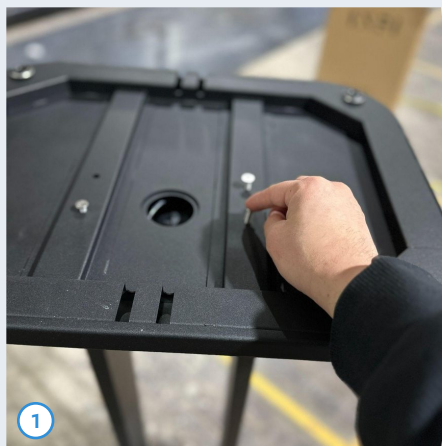

Align the base plate with the column and fasten it using the 4 column screws.

Tighten all 4 screws and turn the stand upright.

Column screws M6 x 30mm x4



**CAUTION** During installation, avoid knocking or damaging the opposite (top) end of the column.



### Ready for the host

Lay the assembled stand on its side with the top of the column resting at the edge of a table. This makes it easy to line up and attach the host in the next step.

**Step 5****Mount the Host**

Reattach the host to the top of the stand using the screws saved in Step 1.



1 Unscrew and remove the two covers at the bottom of the host, as before.

2 The mounting area on the first side is now open.

3 Repeat on the other side.



4 Fit the host onto the top of the stand and insert the 4 silver cross-head screws (2 per side).

5 Tighten all 4 screws. The unit is fully assembled and ready to stand upright.

Silver cross-head screws (from Step 1) ×4

## Step 6

## Connect the Cables

Power and network cables pass through the column and exit at the base.



1 Open the rear door of the kiosk and plug the power cable into the port at the bottom-left.

2 Plug the Ethernet cable into the pass-through port at the bottom-right.

3 Route both cables down the column so they exit at the base.

### Ports at a glance

**Bottom-left**

Power cable

**Bottom-right**

Ethernet (pass-through)

## Step 7 Final Check & Power On



- ☒ Confirm all screws are fully tightened.
- ☒ Ensure the stand and unit are stable, with no wobble.
- ☒ Connect the power cable and power adapter.
- ☒ Perform a power-on test to confirm proper operation.

## You're Ready to Go

Congratulations! Your K5 kiosk is set up and ready to deliver happier customers and increased sales.

Need help or missing a part?

**888-857-9831**